




APPLYING A SOUND PAD

Step 1: Make sure the area where the pad will be applied is clean and dry. If necessary, wipe clean with rubbing alcohol to remove any residue.

Step 2: Carefully remove the protective backing and adhere the pad to the bowl. The slit in the pad will ensure the pad will fit around your plumbing.

Step 3: Apply a non-moisture tape (such as Gorilla tape) along all four sides of the pad. This will help to hold the pad to the sink while the adhesive bonds to the sink.

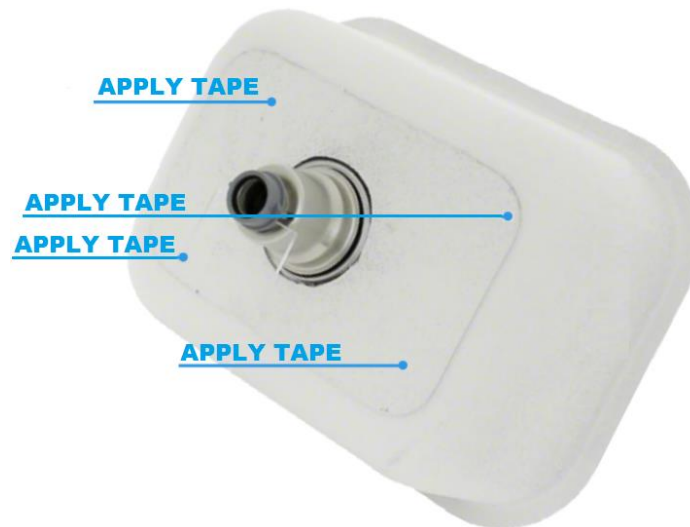

If you have any questions or need assistance, please contact our technicians via email: customerservice@alloraus.com

22713 Commerce Center Court, Ste 140
Dulles, VA 20166

Web: www.AlloraUSA.com

Email: Customerservice@AlloraUSA.com

Phone: (571)-291-3484

Fax: (571)-291-3482